

# MP1

**Stainless steel submersible pumps for environmental  
purge and sampling applications**

Installation and operating instructions



## CONTENTS

	Page
<b>1. Limited warranty</b>	<b>2</b>
<b>2. Symbols used in this document</b>	<b>3</b>
<b>3. Product introduction</b>	<b>3</b>
3.1 Delivery and handling	3
3.2 Applications	3
<b>4. Operating conditions</b>	<b>4</b>
<b>5. Installation</b>	<b>4</b>
5.1 Pre-installation checks	4
5.2 Mechanical installation	5
5.3 Electrical installation	5
5.4 Operation	8
5.5 Maintenance	8
<b>6. Technical data</b>	<b>11</b>
<b>7. Disposal</b>	<b>11</b>
<b>8. Accessories</b>	<b>12</b>
8.1 Service kits, tools, and motor leads	12

**Warning**

***Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.***

***This booklet should be left with the owner of the pump for future reference and information regarding its operation.***

**1. Limited warranty**

Products manufactured by GRUNDFOS PUMPS CORPORATION (Grundfos) are warranted to the original user only to be free of defects in material and workmanship for a period of 24 months from date of installation, but not more than 30 months from date of manufacture. Grundfos' liability under this warranty shall be limited to repairing or replacing at Grundfos' option, without charge, F.O.B. Grundfos' factory or authorized service station, any product of Grundfos' manufacture. Grundfos will not be liable for any costs of removal, installation, transportation, or any other charges which may arise in connection with a warranty claim. Products which are sold but not manufactured by Grundfos are subject to the warranty provided by the manufacturer of said products and not by Grundfos' warranty. Grundfos will not be liable for damage or wear to products caused by abnormal operating conditions, accident, abuse, misuse, unauthorized alteration or repair, or if the product was not installed in accordance with Grundfos' printed installation and operating instructions.

To obtain service under this warranty, the defective product must be returned to the distributor or dealer of Grundfos' products from which it was purchased together with proof of purchase and installation date, failure date, and supporting installation data. Unless otherwise provided, the distributor or dealer will contact Grundfos or an authorized service station for instructions. Any defective product to be returned to Grundfos or a service station must be sent freight prepaid; documentation supporting the warranty claim and/or a Return Material Authorization must be included if so instructed.

**GRUNDFOS WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSSES, OR EXPENSES ARISING FROM INSTALLATION, USE, OR ANY OTHER CAUSES. THERE ARE NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH EXTEND BEYOND THOSE WARRANTIES DESCRIBED OR REFERRED TO ABOVE.**

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages and some jurisdictions do not allow limit actions on how long implied warranties may last. Therefore, the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction.

## 2. Symbols used in this document



### Warning

***If these safety instructions are not observed, it may result in personal injury!***

### Caution

***If these safety instructions are not observed, it may result in malfunction or damage to the equipment!***

### Note

***Notes or instructions that make the job easier and ensure safe operation.***

## 3. Product introduction



***All electrical work should be carried out by a qualified electrician in accordance with the latest edition of the National Electrical Code (NEC), local codes, and regulations.***

### Warning

***Adherence to environmental regulations — when handling and operating the MP1 Variable Performance Pump System, all environmental regulations concerning the handling of hazardous materials must be observed. When the pump is taken out of operation, great care should be taken to ensure that the pump contains no hazardous materials that might cause injury to human health or to the environment.***



### Warning

***Returning a pump for service — only pumps that are certified as uncontaminated will be accepted by GRUNDFOS for servicing. GRUNDFOS must receive this certification prior to receiving the pump. If not, GRUNDFOS will refuse to accept delivery of the pump. In these cases, all costs incurred in returning the product to the customer will be paid by the customer. Contact your distributor for details on returning MP1 products for servicing.***



### Warning

***The MP1 Variable Performance Pump system is not approved for Class 1, Division 1, Group D locations as specified by the National Electrical Code (NEC). Consult local authorities and regulations if you have any doubt about its suitability for a specific application.***



Your Grundfos MP1 is of the utmost quality. Combined with proper installation, your Grundfos pump will give you many years of reliable service. To ensure the proper installation of the pump, carefully read the complete manual before attempting to install the pump.

## 3.1 Delivery and handling

### 3.1.1 Delivery

#### Caution

***The pumps should remain in the packing until they are placed in vertical position during installation.***

The shipping carton should contain:

- pump end
- motor
- cable.

Examine the components carefully to make sure no damage has occurred to the pump end, motor, or cable during shipment.

### 3.1.2 Handling

This Grundfos MP1 Environmental Pump should remain in its shipping carton until it is ready to be installed. The carton is specially designed to protect it from damage. During unpacking and prior to installation, **make sure that the pump is not contaminated, dropped or mishandled.**

The motor is equipped with an electrical cable.

#### Caution

***Under no circumstance should the electrical cable be used to support the weight of the pump.***

## 3.2 Applications

### 3.2.1 Pumped liquids

MP1 pumps are designed for pumping cold groundwater that is free of air or gasses. Decreased pump performance and life expectancy can occur if the groundwater is not cold or contains air or gasses.

## 4. Operating conditions

To ensure the MP1 Variable Performance Pumping System operates properly, follow these guidelines:

- The MP1 pump must be installed vertically with the discharge end pointed upwards.
- The pump and motor must always be completely submerged in fluid to ensure lubrication and cooling of the motor.
- The temperature of the fluid being pumped should be according to the technical specifications.
- The installation depth of the pump should always be at least 3 ft below the maximum drawdown level of the well.
- MP1 pumps are not recommended for well development or pumping fluid containing abrasives.
- MP1 pumps are not recommended for continuous operation applications.
- The warranty of the MP1 pumps will be void if other than the MP1 VFD is used or if corrosive fluids are pumped.
- The service life of dedicated MP1 pumps may be compromised if the ambient water quality exceeds one or more of the following values:  
pH<5  
DO>2 ppm  
H2S>1 ppm  
CL->500 ppm  
DS>1000 ppm

---

### Operating conditions - MP1

---

Flow (Q):	Max. 9 gpm
Head (H):	Max. 275 ft
Liquid temp:	Max. 80 °F (28 °C)

---

## 5. Installation

### 5.1 Pre-installation checks

Before beginning installation, the following checks should be made. They are all critical for the proper installation of this submersible pump.

#### 5.1.1 Condition of the well

If the pump is to be installed in a new well, the well should be fully developed and bailed or blown free of cuttings and sand. Dispose of discharged materials in accordance with the specific job site requirements. The stainless steel construction of the MP1 Environmental Pump makes it resistant to abrasion; however, no pump, made of any material, can forever withstand the destructive wear that occurs when constantly pumping sandy groundwater.

#### Diameter of well casing

The inside diameter of the well casing should be checked to ensure that it is not smaller than the size of the pump and motor.

#### 5.1.2 Condition of the water

MP1 pumps are designed for pumping cold groundwater that is free of air or gasses. Decreased pump performance and life expectancy can occur if the groundwater is not cold or contains air or gasses.

#### 5.1.3 Installation depth

Pumping sand or well sediment can occur when the pump motor is installed lower than the top of the well screen or within 5 ft of the well bottom. This can reduce the performance and life expectancy of the pump and should be avoided.

#### 5.1.4 Electrical supply

The MP1 motor is a 3 phase 220 VAC unit designed to be driven by the MP1 variable frequency drive (VFD).

#### 5.1.5 Wire cable type

The wire cable used between the pump and control box or panel should be approved for submersible pump applications. The conductor insulation should have a continuous Teflon® jacket with no splices and must be suitable for use with submersible pumps.

## 5.2 Mechanical installation

### 5.2.1 Riser pipe or hose

The riser pipe or hose should be properly sized and selected based on estimated flow rates and friction-loss factors.

A back-up wrench should be used when attaching a riser pipe or metallic nipple to the pump. The pump should only be gripped by the flats on the top of the discharge chamber. The body of the pump, or motor should not be gripped under any circumstance.

### 5.2.2 If a steel riser pipe is used

An approved pipe thread compound should be used on all joints. Make sure the joints are adequately tightened in order to resist the tendency of the motor to loosen the joints when stopping and starting.

After the first section of the riser pipe has been attached to the pump, the lifting cable or elevator should be clamped to the pipe. Do not clamp the pump. When raising the pump and riser section, be careful not to place bending stress on the pump by picking it up by the pump-end only. A check valve may be added to the pump to prevent fluid from flowing back into the pump after it is turned off.

**Make sure that the electrical cables are not cut or damaged in any way when the pump is being lowered in the well.**

The drop cable should be secured to the riser pipe at frequent intervals to prevent sagging, looping or possible cable damage.

### 5.2.3 If plastic or flexible riser pipe is used

Use the correct compound recommended by the pipe manufacturer or specific job specifications. Make sure that joints are securely fastened.

**Do not connect the first plastic or flexible riser section directly to the pump.**

**Always attach a metallic nipple or adapter into the discharge chamber of the pump. When tightened, the threaded end of the nipple or adapter must not come in contact with the check valve retainer in the discharge chamber of the pump.**

**Important — plastic and flexible pipe tend to stretch under load. This stretching must be taken into account when securing the cable to the riser pipe.**

Note

Leave enough slack between tie points to allow for this stretching. This tendency for plastic and flexible pipe to stretch will also affect the calculation of the pump setting depth. If the depth setting is critical, check with the manufacturer of the pipe to determine how to compensate for pipe stretch.

When these types of pipe are used, it is recommended that a safety cable be attached to the pump to lower and raise it. A safety cable bracket is available from Grundfos (product number 001A0019).

### 5.2.4 Protect the well from contamination

While installing the pump, proper care should be used not to introduce foreign objects or contaminants into the well.

To protect against surface water entering the well and contaminating the well, the well should be finished off utilizing a locally approved well seal.

### 5.2.5 Lowering the pump into the well

Make sure the electrical motor leads are not cut or damaged in any way when the pump is being lowered into the well. **Do not use the motor leads to support the weight of the pump.**



Fig. 1 Lowering the pump using a safety bracket cable

TM05 0812 0511

## 5.3 Electrical installation

### Warning

**To reduce the risk of electrical shock during operation of this pump requires the provision of acceptable grounding. Refer to the MP1 Variable Frequency Drive Installation and Operating Instructions manual for proper wiring instructions.**



**All electrical work should be performed by a qualified electrician in accordance with the latest edition of the National Electrical Code, local codes and regulations.**

### 5.3.1 Dismantling and reassembling pump end

The MP1 pump can be dismantled and reassembled quickly and easily by referring fig. 10 on p. 10 and following these steps.

#### Dismantling

1. Shut the pump off by placing the MP1 VFD in the STOP position.
2. Disconnect MP1 VFD from power supply or generator.
3. Disconnect the motor lead from the MP1 VFD.
4. Remove the pipe or tubing connected to the pump (OPTIONAL).
5. Remove the set screw (refer to pos. 12 in fig. 10 on p. 10). Grasp the inlet screen (pos. 1) and slowly but forcefully pull it up over the pump housing (pos. 2).

#### Caution

**Do not allow the inlet screen to scrape the insulation from the motor lead.**

6. Unscrew and remove the pump housing (counterclockwise when viewed from the top). This will expose the impeller assembly (guide vanes, wear rings, etc.), which can now be removed by hand for extended cleaning or replacement.

#### Reassembly

To reassemble the MP1 pump, refer to and follow these steps.

1. Make sure the motor lead is not connected to the MP1 VFD.
2. Return the impeller assembly components (guide vanes, wear rings, etc.) to the shaft in the proper order per impeller assembly diagram.
3. Screw the pump housing (pos. 2) back onto the top of the pump. If all of the impellers and chambers were replaced correctly, the pump housing should screw on easily. Hand tighten.
4. Slip the inlet screen (pos. 1) back over the pump housing. Screw the set screw (pos. 12) back into the inlet screen.

#### Caution

**Be sure to line up the motor lead with the recessed area in the pump housing to avoid scraping the insulation from the lead.**

### 5.3.2 Dismantling and reassembling motor

If the pump is moved from well to well, it should be thoroughly decontaminated prior to being installed in the next well. In addition to cleaning the individual components inside and outside, the water in the pump motor should be replaced using the syringe that came with the pump. This can be accomplished through the following steps:


1. Shut the pump off by placing the MP1 VFD in the STOP position.
2. Disconnect MP1 VFD from power supply or generator.
3. Disconnect the motor lead from the MP1 VFD.
4. Remove the discharge tubing and the pump end (follow dismantling procedure on p. 6).
5. Turn the pump and motor upside down.

6. Use a flat blade screwdriver to remove the filling screw on the bottom of the motor; see fig. 2.



**Fig. 2** Removing the filling screw

7. Remove the three Allen head set screws at the bottom of the motor with a 2.5 mm Allen wrench.
8. Push gently on the motor shaft to move bearing housing out of the stator housing.
9. Continue to remove bearing housing and motor shaft from stator housing.
10. Clean motor shaft with a brush.
11. Empty the water from the motor.
12. Clean inside of stator housing with a brush.
13. Replace motor shaft into stator housing.

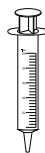

**Fig. 3** Using syringe to refill motor

14. Refill motor using contaminant-free, clean water using the syringe that came with the MP1 pump; see fig. 3.
15. Replace bearing housing and tighten Allen screws.

TM05 0814 0611

TM05 0813 0611

16. Continue to add water until the level is even with the bottom edge of the screw hole.
17. Replace and tighten the filling screw.
18. Turn the pump over several times, then remove the filling screw again to let any trapped air escape (if air is left inside the motor, the life of the motor will be shortened). Add more water, as necessary. Fluid should overflow when the fill cap is screwed back on the motor cavity.
19. Replace and tighten the filling screw.
20. Replace pump end and piping (see *Reassembly* on p. 6).

### 5.3.3 Replacing the motor lead


To replace the motor lead, refer to fig. 10 on p. 10 and follow these steps.

#### Removing the old motor lead

1. Make sure the MP1 VFD is turned OFF, and the motor lead is not connected to the MP1 VFD.
2. Loosen and remove the set screw (pos. 12) from the inlet screen (pos. 1).
3. Slide the inlet screen off the pump. If you plan to use this motor lead again, be careful not to scrape insulation from it as the inlet screen is removed.
4. Loosen and remove the pump housing (pos. 2). Remove the impeller assembly (impellers, guide vanes, etc.).
5. Refer to the illustration on p. 10. Use a 6 mm wrench to loosen and remove the motor lead screw (pos. 14) for the ground lead (green/yellow wire).
6. Pull up on the ground lead to remove it. Using a small screwdriver and precision electronics pliers, pry up and remove the Teflon® washer (pos. 15) and brass washers (pos. 16) from inside the enlarged ground motor screw (pos. 13). Remove the 8mm ground motor screw.
7. Use an Allen wrench (2.5 mm) to remove the two motor screws (pos. 19) holding the suction interconnector (pos. 10) in place. Remove the suction interconnector but be very careful to note which of its slots is lined up with which motor lead — this will be very helpful during reassembly. You may wish to scratch a mark on both the suction interconnector and the motor to aid in matching them up later.
8. Refer to the illustration on the next page. Use a 6 mm wrench to loosen and remove the remaining motor lead screws (pos. 14).
9. Pull up on each of the leads to remove them. Make a note which lead comes out of each hole — this is a **MUST** when installing the new motor lead. Using a small screwdriver and precision electronics pliers, unscrew and remove the Teflon® washer (pos. 15) and the grommet (pos.17).

#### Installing the new motor lead


1. Ensure the motor lead holes are clean and free of moisture.
2. String the inlet screen (pos.1) onto the motor lead.
3. String the motor lead components (shown in fig. 4) onto the end of each motor lead wire (except the striped green ground wire). Using a wire crimp tool, properly crimp each pin onto the lead wires.

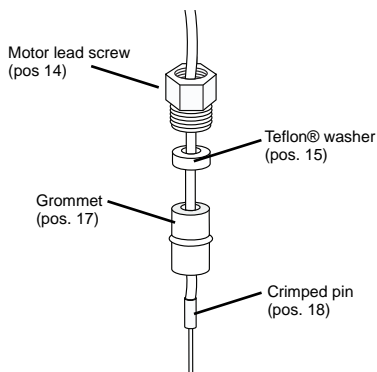

TM05 0816 1611

**Fig. 4** Stringing motor lead components onto motor power conducting motor lead

4. For each wire, place the crimped pin (pos. 18) down into the motor lead hole. Press the grommet (pos. 17) and Teflon® washer (pos. 15) down around the lead. Be sure to reconnect the lead wires in their previous pattern as shown in fig. 5.

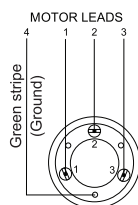

TM05 0815 1611

**Fig. 5** Motor leads and ground

**Note** For Tefzel motor lead, use the following wiring pattern: 1, 2, 3 clockwise from ground terminal (striped green).

5. While pushing the lead down into the motor lead hole, use a 6 mm wrench to tighten the motor lead screw (pos. 14) into place. Repeat for the other two lead wires.
6. Replace the suction interconnector (pos. 10).
7. Replace the ground motor screw (pos. 13). Since the ground wire will be attached to this screw, you will want to put it into the hole that will cause the least amount of twisting to the wire.

8. Replace and tighten the two motor screws (pos. 19) with an Allen wrench.

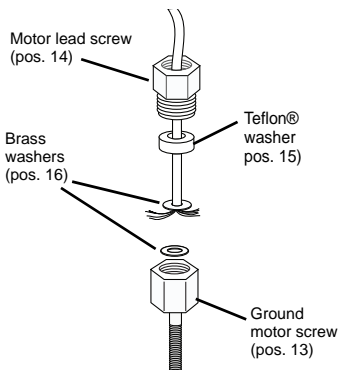


Fig. 6 Ground motor lead

9. String the motor ground lead through the hex lead screw, Teflon® washer and brass washers. Strip about 1/4 inch of insulation from the lead and fray the copper strands outward as shown. Press the washers down into the ground screw and tighten the motor lead screw in place.
10. Return the impeller assembly to the top of the suction interconnector (pos. 10). Refer to fig. 10 on p. 10 for the proper sequence.
11. Screw the pump housing (pos. 2) back onto the suction interconnector.
12. Position the motor lead in the recessed area of the pump housing.
13. Carefully push the inlet screen (pos. 1) over the pump housing and the suction interconnector.

**Caution**

***Be very careful to avoid scraping the insulation from the motor lead as the inlet screen is fitted.***

14. Line up the screw hole in the inlet screen with the screw hole in the pump housing. Fit and tighten the set screw (pos. 12).
15. Connect the motor lead to the MP1 VFD and test the rotation of the pump. Submerge the pump in water, start it at its slowest speed and make sure the pump shaft is turning counterclockwise. If the rotation is incorrect, switching any two power leads (with POWER OFF) will correct the problem.
16. Reconnect the tubing or pipe.

## 5.4 Operation

Refer to the MP1 Variable Frequency Drive Installation and Operating Instructions manual.

## 5.5 Maintenance

### Periodic motor inspection

If the pump is operating at a decreased capacity and the impeller assembly components (impellers, guide vanes, etc.) do not appear to be the cause, the motor should be checked. A checklist of things to examine includes:

- Check the fluid level inside the motor (refer to p. 6). Replace and refill as necessary.
- Inspect the outside of the motor for cracks, dents, etc.
- Remove the inlet screen (pos. 1), pump housing (pos. 2), and the impeller assembly (guide vanes, wear rings, etc.). Try to spin the motor shaft by hand. It should spin freely. If it does not, the motor must be replaced.
- Check the winding and insulation resistance of the motor and lead as described in section *Checking motor winding resistance* on p. 8.

### Checking motor winding resistance

Turn the power off and disconnect the motor lead from the VFD. Using an ohmmeter, set the scale to R X 1.

Zero-adjust the meter and measure the resistance between any two power conducting leads (prongs on the motor lead plug).

If the ohm value is too low, the motor may be shorted. If too high, the motor windings or the leads may be open. (Refer to lead length/ohm value reference table on p. 9.)

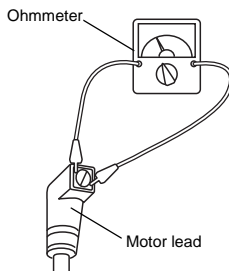


Fig. 7 Using an ohmmeter to check winding resistance

TM05 0817 1611


TM05 0819 1611



Lead length/ohm values	
Lead length [ft]	Ohm value [ohms]
0	3.0 - 3.5
50	3.6 - 4.1
75	3.9 - 4.4
100	4.2 - 4.7
125	4.5 - 5.0
150	4.8 - 5.3
175	5.1 - 5.6
200	5.4 - 5.9
250	6.0 - 6.5
300	6.6 - 7.1

**Checking insulation resistance**

Turn the power off and disconnect the motor lead from the converter. Use a 500V megohmmeter or megger (1 Meg = 1 M = 1 million). Zero-adjust the meter and measure the resistance between any power conducting leads (prongs on the motor lead plug) and ground. If the pump has been removed from the well, a good way to test this (as shown in fig. 8) is to submerge the motor lead and MP1 pump in a bucket of water. Touch one lead of the megohmmeter to the pump and one to a motor lead. If the ohm value is lower than 1.5M Ohms in any lead other than ground, the motor or lead is defective and must be replaced.

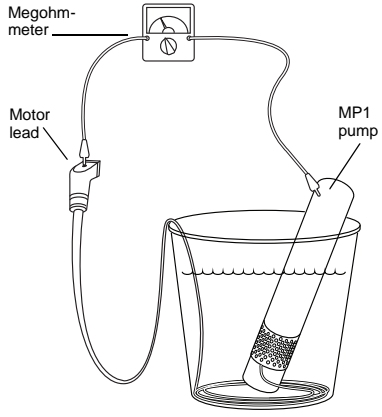

**Fig. 8** Using a megohmmeter to check insulation resistance


TM05 0820 1611

**Checking components for wear**

The pump components should be periodically checked to ensure they are still within their minimum operating tolerance (refer to fig. 10 on p. 10 for assembly diagram).

Part	Min. operating tolerance
Impeller (pos. 5)	Should show no visible wear.
Guide vane (pos. 3)	Should show no visible wear.
Wear ring (pos. 4)	Min. thickness ("A" in fig. 9) should never be less than 0.04 in (1 mm).

In addition, visually check all components for cracks, corrosion, or wear.

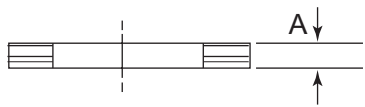

**Fig. 9** Checking minimum thickness on wear ring

TM05 0821 1611

**5.5.1 Storage**

The pump should be thoroughly cleaned before storage to ensure no contamination is present. Both the pump and the VFD should be stored in a clean and dry area in the following temperature range: 34°F (1°C) to 120°F (50°C)

## 5.5.2 Assembly diagram

MP1 assembly		
Pos.	Description	Qty. per pump
1	Inlet Screen	1
2	Pump Housing 1/2" NPT	1
3	Guide Vane	2
4	Wear ring	2
5	Impeller ring	2
6	Spacer ring	2
7	Wear plate	2
8	Motor lead assembly	4
9	Shaft	1
10	Suction interconnector	1
11	Stator housing	1
12	Set screw	1
13	Ground motor screw	1
14	Motor lead screw	4
15	Teflon® washer	4
16	Brass washer	2
17	Grommet	3
18	Crimped pin	3
19	Motor screw (long)	2
20	Motor screw (short)	6
21	Filling screw w/O-ring	1
22	Motor thrust washers	2
23	Lip seal	1
24	Bearing housing O-ring	2

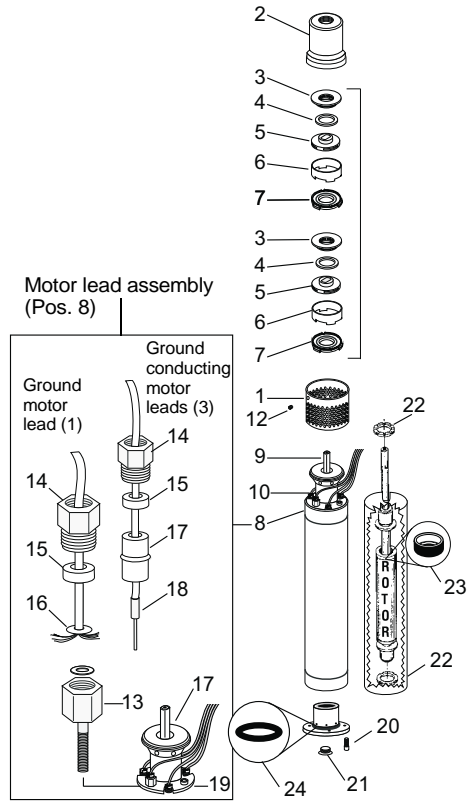


Fig. 10 Pump components and motor lead

Teflon® is a registered trademark of Du Pont.

\* Not economical to replace. Must purchase complete pump/motor.

## 6. Technical data

Technical data - MP1	
<b>Electric</b>	
Full load rating	0.5 Hp / 220V / 3 Ph / 400 Hz / 5.5A
Max. current (SFA)	5.5 amps
Motor protection	Thermik Geratebau, Series SY6 - (176°F [80°C])
Current overload	Incorporated into MP1 VFD
<b>Piping connection</b>	
Discharge port	1/2 in. female NPT
<b>Operating conditions</b>	
Min. ambient fluid temperature	34°F (1°C)
Max. ambient fluid temperature	80°F (28°C)
<b>Motor fluid</b>	
Motor lubricating fluid	Clean water
<b>Storage conditions</b>	
Minimum Ambient Temperature	34°F (1°C)
Maximum Ambient Temperature	20°F (50°C)
<b>Dimensions and weight (pump and motor)</b>	
Dimensions	11.3" (287 mm) length x 1.81" (46 mm) diameter
Net weight	5.5 lbs (2.5 kg), excluding motor lead
<b>Lead lengths</b>	
Standard lengths [ft]	30, 50, 75, 100, 125, 150, 175, 200, 250, 300

## 7. Disposal

### Warning

**Adherence to environmental regulations — when handling and operating the MP1 Variable Performance Pump System, all environmental regulations concerning the handling of hazardous materials must be observed. When the pump is taken out of operation, great care should be taken to ensure that the pump contains no hazardous materials that might cause injury to human health or to the environment.**



## 8. Accessories

### 8.1 Service kits, tools, and motor leads

Replacement parts, service tools and motor leads are available from your Grundfos environmental distributor.

#### Service kits

Pos. (see fig. 10)	Description
3	Guide vane
4	Wear ring
5	Impeller
6	Spacer ring
7	Wear plate
4	Wear ring
7	Wear plate
13	Ground motor screw
14	Motor lead screw
15	Teflon® washer
16	Brass washer
17	Grommet
18	Crimped pin
5	Impeller
12	Set screws
14	Motor lead screws
15	Teflon® washer
16	Brass washer
17	Grommet
18	Crimped pin
19	Motor screw (long)
20	Motor screw (short)
21	Filling screw with O-ring
22	Motor thrust washers

#### Teflon® motor lead replacement kits [ft]

30
50
100
125
150
175
200
250
300

#### Accessories

Safety cable bracket (placed between top of pump and discharged piping connector)

This page intentionally left blank.

This page intentionally left blank.



<b>L-MP1-TL-01</b> 05.11	<b>US</b>
Repl. L-RF-IO-010 07.02	

© 2002, 2011 Grundfos Pumps Corp.

The name Grundfos, the Grundfos logo, and the payoff Be-Think-Innovate are registered trademarks owned by Grundfos Management A/S or Grundfos A/S, Denmark. All rights reserved worldwide.

Subject to alterations.

---

Environmental Equipment & Supply  
491L Blue Eagle Ave  
Harrisburg, PA 17112  
Ph: (800) 739.7706 Fax: (717) 901.8114  
[www.envisupply.com](http://www.envisupply.com)

